

## SECTION 4

### NAVIGATION SYSTEM: MEMORY POINTS

#### Navigation system: memory points


- [Navigation settings](#) 116
  - [Setting up the “Home”](#) ..... 117
  - [Setting up the “Preset Destinations”](#) ..... 119
  - [Setting up the “Address Book”](#) ..... 122
  - [Setting up the “Areas to Avoid”](#) ..... 128
  - [Deleting previous destinations](#) ..... 133

## Navigation settings —

Points or areas on the map can be registered.

The registered points can be used on the “Destination” screen. (See “ — Destination search by Home” on page 70, “ — Destination search by Preset destinations” on page 70 and “ — Destination search by “Address Book”” on page 83.)


Registered areas are avoided at the time of route search.

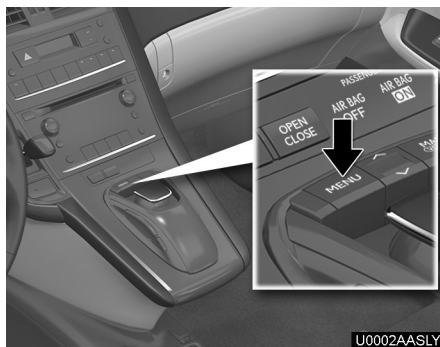

### 1. Push the “MENU” button on the Remote Touch.



### 2. Select “Setup”.

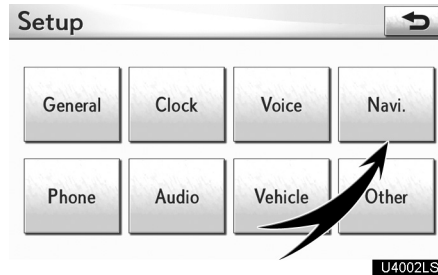

### 3. Select “Navi.”.




On this screen, the following operations can be performed.

No.	Function
1	<b>Sets home</b> (See page 117.)
2	<b>Sets preset destinations</b> (See page 119.)
3	<b>Sets address book</b> (See page 122.)
4	<b>Sets area to avoid</b> (See page 128.)
5	<b>Deletes previous destinations</b> (See page 133.)
6	<b>Detailed navigation settings</b> (See page 325.)

## — Setting up the “Home”

If home has been registered, that information can be recalled by using “Go Home” on the “Destination” screen. (See “— Destination search by Home” on page 70.)

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Setup”.
3. Select “Navi.” on the “Setup” screen.

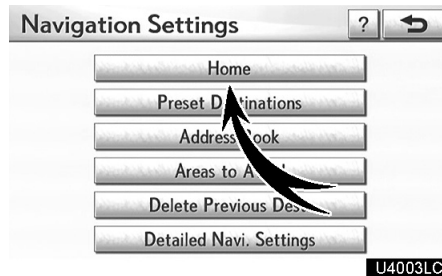


4. Select “Home”.



- Registering home (See page 117.)
- Editing home (See page 118.)
- Deleting home (See page 119.)

### (a) Registering home

1. Push the “MENU” button on the Remote Touch, then select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Home” on the “Navigation Settings” screen.

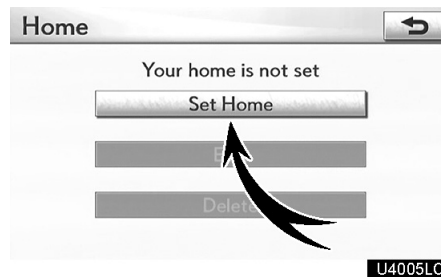

4. Select “Set Home”.



5. Enter the location in the same way as for a destination search. (See “Destination search” on page 68.)

## NAVIGATION SYSTEM: MEMORY POINTS

When registration of home is completed, the "Edit Home" screen will be displayed.

**6. Select "OK".**

To edit registered information, see "(b) Editing home" on page 118.

**(b) Editing home**

1. Push the "MENU" button on the Remote Touch, then select "Setup".

2. Select "Navi." on the "Setup" screen.

3. Select "Home" on the "Navigation Settings" screen.

**4. Select "Edit".**

**5. Select "Edit" for the item you want to change.**

"Name": To edit home name. The names can be displayed on the map. (See page 126.)

"Location": To edit location information. (See page 127.)

"Phone #": To edit telephone numbers. (See page 127.)

"Icon": To select icons to be displayed on the map. (See page 125.)

**6. Select "OK".**

(c) Deleting home

1. Push the “MENU” button on the Remote Touch, then select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Home” on the “Navigation Settings” screen.



U4010LC

4. Select “Delete”.
5. To delete home, select “Yes”. To cancel the deletion, select “No”.

## — Setting up the “Preset Destinations”

If preset destination has been registered, that information can be recalled by using “Preset Destination” on the “Destination” screen. (See “— Destination search by Preset Destinations” on page 70.)

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Setup”.
3. Select “Navi.” on the “Setup” screen.



U4011LC

4. Select “Preset Destinations”.



U4012LC


- Registering preset destination (See page 120.)
- Editing preset destination (See page 121.)
- Deleting preset destination (See page 122.)

### (a) Registering preset destinations


1. Push the "MENU" button on the Remote Touch, then select "Setup".
2. Select "Navi." on the "Setup" screen.
3. Select "Preset Destinations" on the "Navigation Settings" screen.



#### 4. Select "Set".

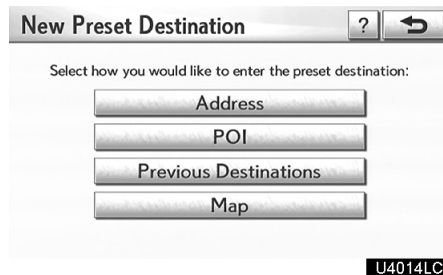

5. Enter the location in the same way as for a destination search. (See "Destination search" on page 68.)

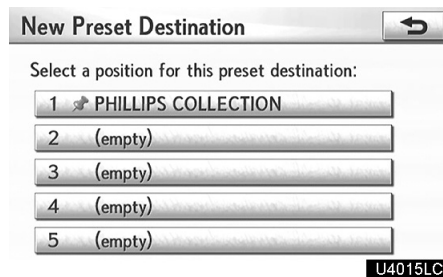

6. Select a position for this preset destination.

When registration of preset destination is completed, the "Edit Preset Destination" screen will be displayed.



#### 7. Select "OK".


To edit registered information, see "(b) Editing preset destinations" on page 121.

(b) Editing preset destinations


1. Push the "MENU" button on the Remote Touch, then select "Setup".
2. Select "Navi." on the "Setup" screen.
3. Select "Preset Destinations" on the "Navigation Settings" screen.



4. Select "Edit".

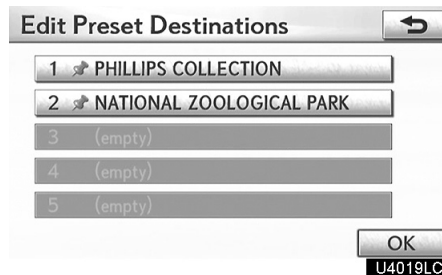

5. Select the button of the desired preset destination.

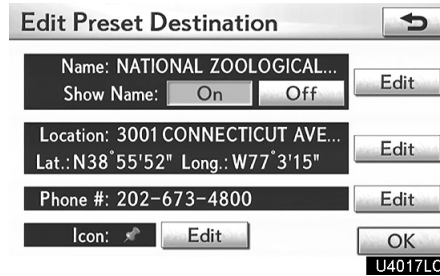

6. Select "Edit" for the item you want to change.

"Name": To edit preset destination names. The names can be displayed on the map. (See page 126.)

"Location": To edit location information. (See page 127.)

"Phone #": To edit telephone numbers. (See page 127.)

"Icon": To select icons to be displayed on the map. (See page 125.)

7. Select "OK".


(c) Deleting preset destinations

1. Push the "MENU" button on the Remote Touch, then select "Setup".
2. Select "Navi." on the "Setup" screen.
3. Select "Preset Destinations" on the "Navigation Settings" screen.



U4020LC

4. Select "Delete".

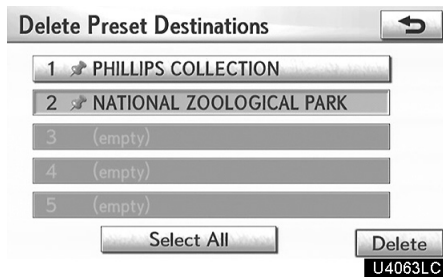

U4063LC

5. Select the preset destination for deletion.

**"Select All":** To select all preset destinations on the list.

**"Unselect All":** To unselect all of the selected preset destinations.

6. Select "Delete".

7. To delete preset destination, select "Yes". To cancel the deletion, select "No".

## — Setting up the "Address Book"


Points or areas on the map can be registered.

1. Push the "MENU" button on the Remote Touch. (See "—Remote Touch" on page 5.)
2. Select "Setup".
3. Select "Navi." on the "Setup" screen.



U4021LC

4. Select "Address Book".

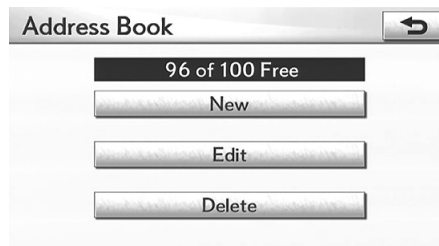

U4022LC

- Registering address book entries (See page 123.)
- Editing address book entries (See page 124.)
- Deleting address book entries (See page 128.)




(a) Registering address book entries

1. Push the “MENU” button on the Remote Touch, then select “Setup”.


2. Select “Navi.” on the “Setup” screen.

3. Select “Address Book” on the “Navigation Settings” screen.

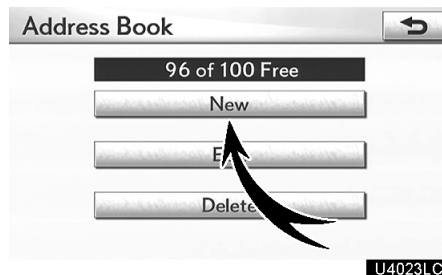

U4023LC


4. Select “New”.

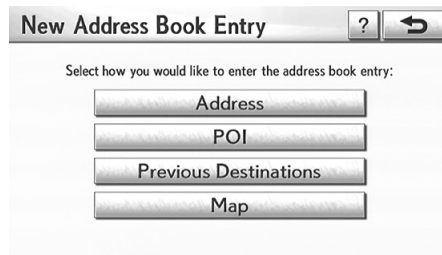

U4024LC

5. Enter the location in the same way as for a destination search. (See “Destination search” on page 68.)

After the address book entry has been registered, the “Edit Address Book Entry” screen will be displayed.

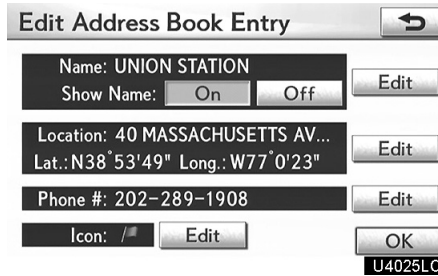

6. Select “OK”.

To edit registered information, see “(b) Editing address book entries” on page 124.


**INFORMATION**

*Up to 100 address book entries can be registered.*


### (b) Editing address book entries

The icon, name, location and/or telephone number of a registered address book entry can be edited.


1. Push the "MENU" button on the Remote Touch, then select "Setup".
2. Select "Navi." on the "Setup" screen.
3. Select "Address Book" on the "Navigation Settings" screen.

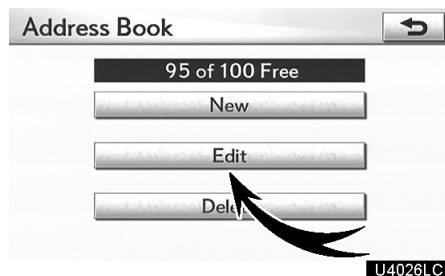

4. Select "Edit".

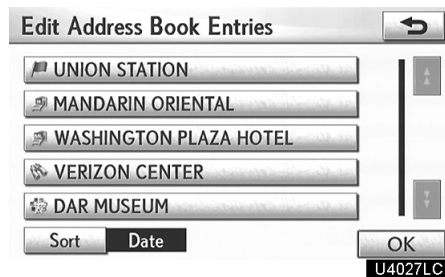

5. Select the button of the desired address book entry.

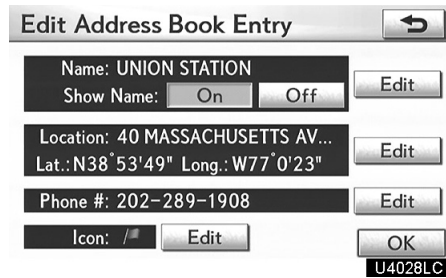

6. Select "Edit" for the item you want to change.

"Name": To edit address book entry names. The names can be displayed on the map. (See page 126.)


"Location": To edit location information. (See page 127.)

"Phone #": To edit telephone numbers. (See page 127.)


"Icon": To select icons to be displayed on the map. (See page 125.)

7. Select "OK".

- To change “Icon”

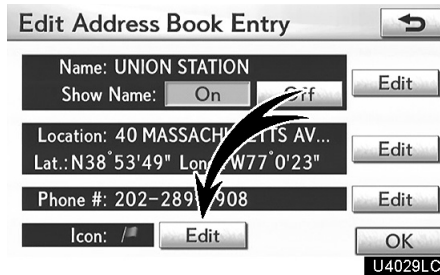

1. Select “Edit” of “Icon”.

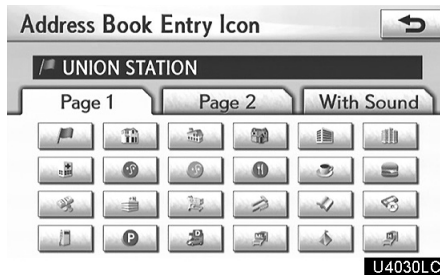


2. Select the desired icon.

Change pages by selecting “Page 1”, “Page 2” or “With Sound” tab.

## SOUND ICONS


You can set a sound for some address book entries. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

1. Select “With Sound” on the “Address Book Entry Icon” screen.

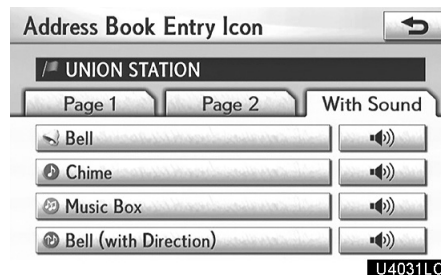

2. Select the desired sound icon.


The next screen appears when “Bell (with Direction)” is selected.

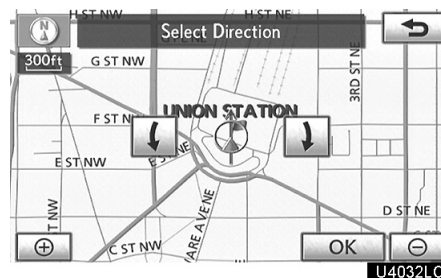

Select either  or  to adjust the direction. Select “OK”.

The bell sounds only when the vehicle approaches this point in the direction that has been set.

- To change “Name”

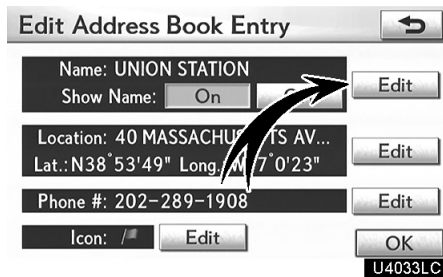

**Edit Address Book Entry**

Name: UNION STATION  
Show Name: ☒ On ☐ Off **Edit**

Location: 40 MASSACHUSETTS AV... **Edit**


Lat.: N38°53'49" Long.: W77°0'23" **Edit**

Phone #: 202-289-1908 **Edit**

Icon: **Edit** **OK**

U4033LC

1. Select “Edit” of “Name”.

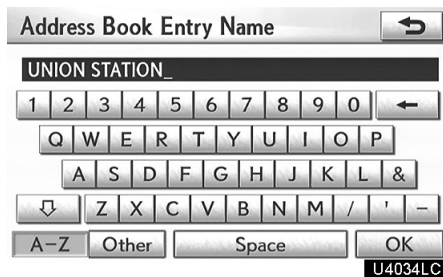

**Address Book Entry Name**

UNION STATION

1 2 3 4 5 6 7 8 9 0 **←**

Q W E R T Y U I O P

A S D F G H J K L &

**↵** Z X C V B N M / ' -

A-Z Other Space **OK**

U4034LC

2. Enter the name using the alphanumeric keys.


Up to 32 characters can be entered.

3. Select “OK”.

The previous screen will be displayed.

### DISPLAYING MEMORY POINT NAMES

The name of an address book entry can be set to display on the map.

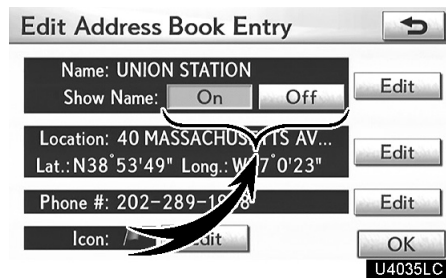

**Edit Address Book Entry**

Name: UNION STATION  
Show Name: ☐ On ☒ Off **Edit**

Location: 40 MASSACHUSETTS AV... **Edit**

Lat.: N38°53'49" Long.: W77°0'23" **Edit**


Phone #: 202-289-1908 **Edit**


Icon: **Edit** **OK**


U4035LC


To show the name, select “On” on the “Edit Address Book Entry” screen. To not show it, select “Off”.





- To change "Location"

**Edit Address Book Entry** 

Name: UNION STATION  
Show Name: ☐ On ☐ Off 


Location: 40 MASSACHUSETTS AV...   
Lat.: N38°53'49" Long.: W77°0'23"

Phone #: 202-289-1908 

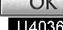Icon:    


1. Select "Edit" of "Location".





2. Select one of the 8 directional buttons to move the cursor  to the desired point on the map.
3. Select "OK".


The previous screen will be displayed.


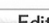
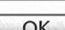
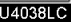
- To change "Phone #" (telephone number)

**Edit Address Book Entry** 


Name: UNION STATION  
Show Name: ☐ On ☐ Off 


Location: 40 MASSACHUSETTS AV...   
Lat.: N38°53'49" Long.: W77°0'23"

Phone #: 202-289-1908 


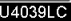
Icon:    

1. Select "Edit" of "Phone #".

**Address Book Entry Phone #** 

202-289-1908 

1	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ
*+	0	#


 

2. Enter the number using number keys.
3. Select "OK".


The previous screen will be displayed.

(c) Deleting address book entries

1. Push the “MENU” button on the Remote Touch, then select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Address Book” on the “Navigation Settings” screen.

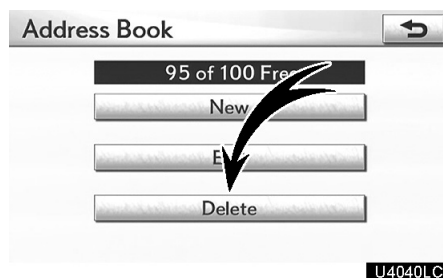

4. Select “Delete”.

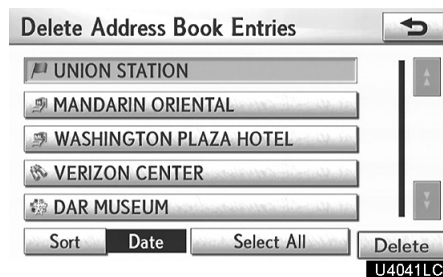

5. Select the button to be deleted.

“**Select All**”: To select all addresses in the address book.

“**Unselect All**”: To unselect all of the selected addresses.

6. Select “Delete”.

7. To delete the address book entry, select “Yes”. To cancel the deletion, select “No”.

## — Setting up the “Areas to Avoid”

Areas you want to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Setup”.
3. Select “Navi.” on the “Setup” screen.



4. Select “Areas to Avoid”.



- Registering areas to avoid (See page 129.)
- Editing areas to avoid (See page 130.)
- Deleting areas to avoid (See page 133.)


(a) Registering areas to avoid

1. Push the “MENU” button on the Remote Touch, then select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Areas to Avoid” on the “Navigation Settings” screen.



U4044LC

4. Select “New”.

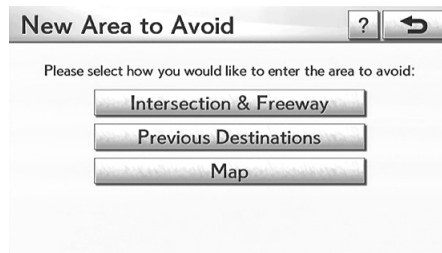

U4045LC


5. Enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “Destination search” on page 68.)





U4046LC

6. Scroll the map to the desired point.  
“Adjust Location”: To adjust the position in smaller increments.

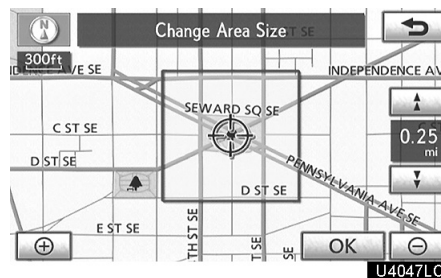7. Select “Enter”.



U4047LC

8. Select either  or  to change the size of the area to be avoided.

9. Select “OK”.

**INFORMATION**

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.


### (b) Editing area to avoid

The name, location and/or area size of a registered area can be edited.


1. Push the “MENU” button on the Remote Touch, then select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Areas to Avoid” on the “Navigation Settings” screen.



4. Select “Edit”.

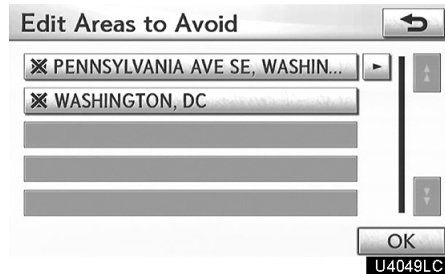

5. Select the desired area button.

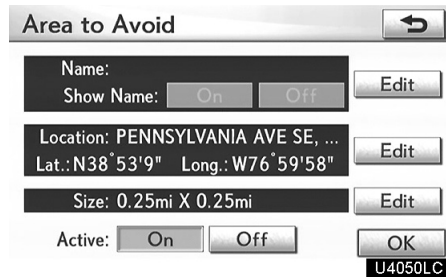

6. Select “Edit” for the item you want to change.

“Name”: To edit the name of the area to avoid. The names can be displayed on the map. (See page 131.)

“Location”: To edit area location. (See page 132.)

“Size”: To edit area size. (See page 132.)

“Active”: To turn on or off the area to avoid feature. To turn on the feature select “On” on the “Edit Area to Avoid” screen. To turn off the feature select “Off” on the “Edit Area to Avoid” screen.

7. Select “OK”.



● To change “Name”

Area to Avoid

Name:  Show Name:

Location: PENNSYLVANIA AVE SE, ...

Lat.: N38°53'9" Long.: W76°59'58"

Size: 0.25mi X 0.25mi

Active:

U4051LC

1. Select “Edit” of “Name”.

Area to Avoid Name

Enter a name

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L &

↵ Z X C V B N M / ' -

A-Z Other Space

U4052LC

2. Enter the name using alphanumeric keys.

Up to 32 characters can be entered.

3. Select “OK”.

The previous screen will be displayed.

DISPLAYING NAMES OF AREAS TO BE AVOIDED

The name of an area to be avoided that may be displayed on the map can be set.

Area to Avoid

Name: A Show Name:

Location: PENNSYLVANIA AVE SE, ...

Lat.: N38°53'9" Long.: W76°59'58"

Size: 0.25mi X 0.25mi

Active:

U4053LC

To show the name, select “On” on the “Area to Avoid” screen. To not show it, select “Off”.

## NAVIGATION SYSTEM: MEMORY POINTS

### ● To change "Location"

Area to Avoid

Name: Show Name:

Location: PENNSYLVANIA AVE SE, ...

Lat.: N38°53'9" Long.: W76°59'58"

Size: 0.25mi X 0.25mi

Active:

U4054LC

#### 1. Select "Edit" of "Location".



#### 2. Select the 8 directional button to move the cursor to the desired point on the map.

#### 3. Select "OK".

The previous screen will be displayed.

### ● To change "Size"

Area to Avoid

Name: Show Name:

Location: PENNSYLVANIA AVE SE, ...


Lat.: N38°53'9" Long.: W76°59'58"

Size: 0.25mi X 0.25mi

Active:

U4056LC

#### 1. Select "Edit" of "Size".

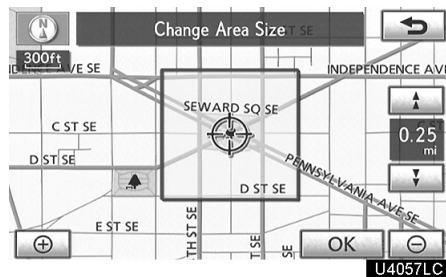

#### 2. Select either or to change the size of the area to be avoided.

#### 3. Select "OK".


The previous screen will be displayed.

(c) Deleting areas to avoid

1. Push the “MENU” button on the Remote Touch, then select “Setup”.
2. Select “Navi.” on the “Setup” screen.
3. Select “Areas to Avoid” on the “Navigation Settings” screen.



4. Select “Delete”.

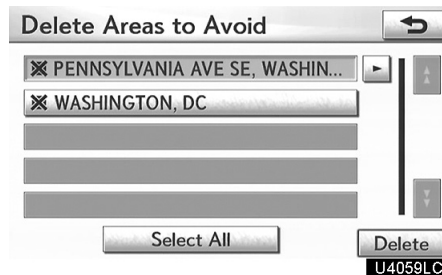

5. Select the button to be deleted.

“Select All”: To select all registered areas to avoid in the system.

“Unselect All”: To unselect all registered areas to avoid in the system.

6. Select “Delete”.

7. To delete the area, select “Yes”. To cancel the deletion, select “No”.


## — Deleting previous destinations

The previous destination can be deleted.

1. Push the “MENU” button on the Remote Touch. (See “—Remote Touch” on page 5.)
2. Select “Setup”.
3. Select “Navi.” on the “Setup” screen.



4. Select “Delete Previous Dest.”.

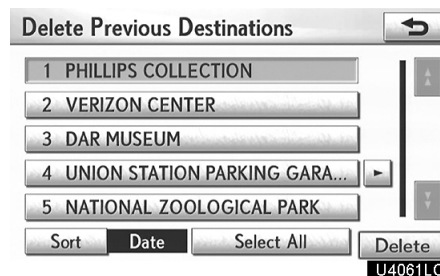

5. Select the button you want to delete.


“Select All”: To select all previous destinations in the system.

“Unselect All”: To unselect all previous destinations in the system.

6. Select “Delete”.

## NAVIGATION SYSTEM: MEMORY POINTS

---

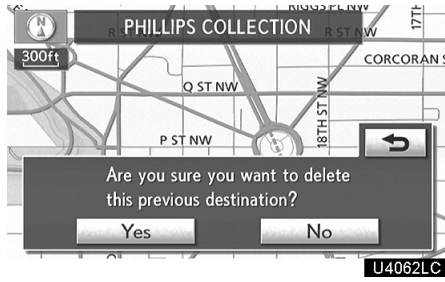

7. To delete the destination, select **“Yes”**. To cancel the deletion, select **“No”**.